


Telemark Bindings Race Mount Instructions for Rottefella R8 on Line Magnum Opus

1. Please see pinline mark provided by customer on ski. Place diamond on mounting plate centered on ski and pinline as shown in picture.

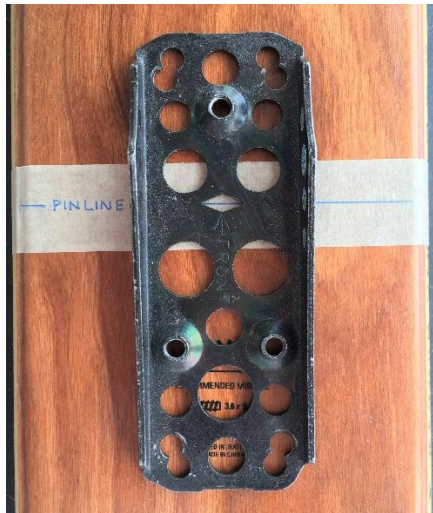

2. Tap holes if you think it is needed.

3. Use 24 hour set 2-part epoxy for screws using a heat gun to put epoxy in screw holes just before installing screws. No wood glue.

4. Set back of heel block flush with back of boot heel as shown in picture.



5. Since doing this mounting procedure, the bindings have not ripped off the ski.



Brought to you by the dedicated staff at Boot Fitting Supply LLC
Copyright © All Rights Reserved

